


# PROFESSIONAL 5 WAY COMBINATION LADDER & PLATFORM

## Assembly Instructions

Read instructions fully before assembly

### COMPONENTS LIST




Check components before commencing assembly. If components are missing or damaged please contact 01773 525730. Do not use the product unless assembly has been completed.

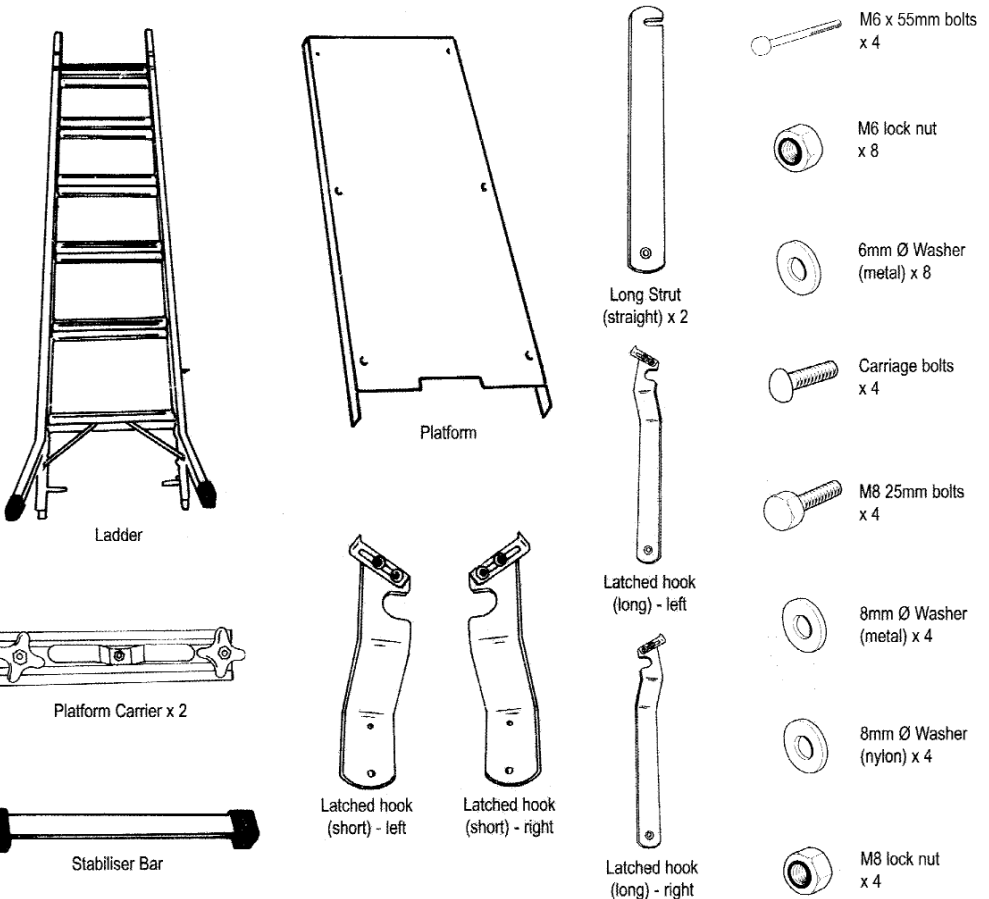

### LADDER ASSEMBLY

#### Attach Stabiliser

1. Remove plastic tips from base of ladder section and set aside. (figure 1)
2. Offer stabiliser up to slots in stile and align 4 holes. Fix in place with four M6 x 55mm bolts, four 6mm Ø metal washers and four M6 lock nuts. (fig. 2)  
Do not overtighten. Replace plastic tips. (fig. 3)

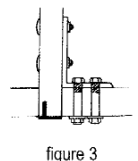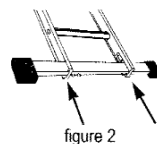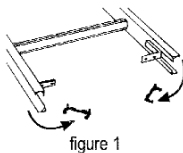

# LADDER ASSEMBLY continued

## Attach Platform Carriers

1. Raise top rung locks and slide ladder sections apart. (fig. 1)
2. Unscrew fixing components and remove tips from top of front ladder section. Set aside. (fig. 2)
3. Locate both carriers and loosen red lever. (fig. 3)
4. Offer up platform carriers to the ends of both stiles. Slide carriers on to stiles ensuring all three carrier guide blocks hook under the lips of the stiles. (fig. 4 & 5).
5. Slide both carriers to bottom of stiles. Replace tips and reconnect ladder sections.

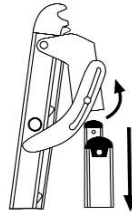


figure 1

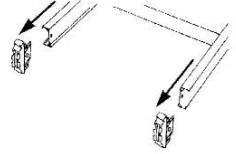


figure 2

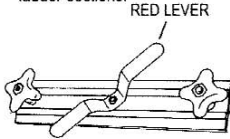


figure 3

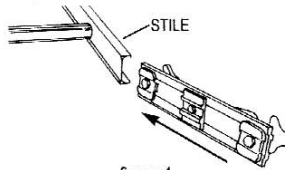


figure 4


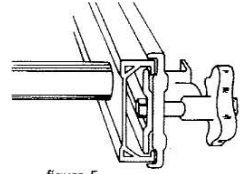


figure 5

# PLATFORM ASSEMBLY

## Attach Latched Hooks (short).

1. Turn platform over. Locate right and left latched hooks (short) and offer up to platform rails. Align with square holes and fix in place with four carriage bolts, four 6mm Ø metal washers and four M6 lock nuts as per illustration.
2. Tighten firmly.

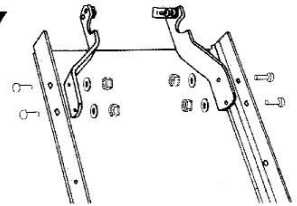


## Attach Latched Hooks (long).

1. Locate right and left latched hooks (long) and offer up to platform rails. Align with round holes and fix in place with two M8 x 25mm bolts, two 8mm Ø Nylon washers, two 8mm Ø metal washers and two M8 lock nuts as per illustration.

Note: The nylon washers must be positioned between the strut and the outside face of the platform rails.

2. Tighten sufficiently to allow hooks to rotate.

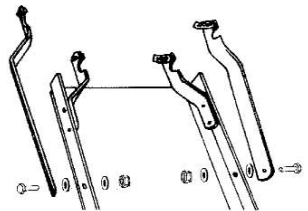


## Attach Long Struts (straight)

1. Locate right and left struts and offer up to platform rails at notched end of platform. Align with round holes and fix in place with two M8 x 25mm bolts, two 8mm Ø Nylon washers, two 8mm Ø metal washers and two M8 lock nuts as per illustration.

Note: The nylon washers must be positioned between the strut and the outside face of the platform rails.

2. Tighten sufficiently to allow struts to rotate.

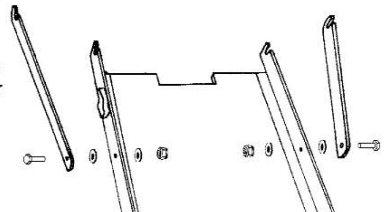

# IMPORTANT

Before use check that all assembly operations have been completed correctly. Read operation instructions on product fully and practice setting both ladder and platform modes. Failure to do so may result in an accident.